




Introducing the OptiTray™

The OptiTray corrugated tray provides an excellent means of attaching the innovative OptiLedge to your cargo, widening the scope of potential applications

The OptiTray™ is...

- A single-wall, simple fold-up, die-cut corrugated tray with print capability
- A customizable shipping platform
- Extremely lightweight, efficient, recyclable and sustainable
- Excellent airfreight pallet
- A quick and secure way to attach the OptiLedge to your product

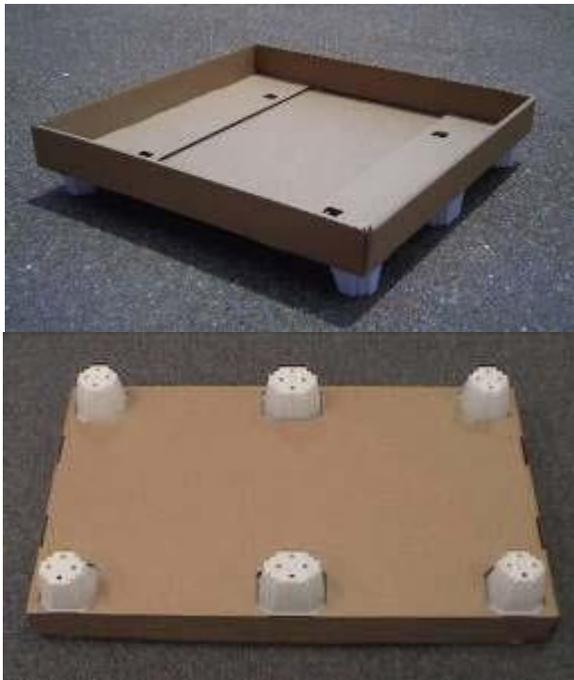

Head Office: 487 Gibson Road Newnan, GA 30263 · USA · T +1 770-253-8808 · www.optiledge.com


| Hong Kong | Atlanta | Shenzhen | Shanghai | Prague |

OPTILEDGE is a trademark owned by OptiLedge LLC



OptiTray Solutions:

The OptiTray design locks the OptiLedge in place by wrapping up and over the vertical flange of the OptiLedge. In this way, the OptiLedge is captured in place and held secure during transit. It allows for a wide variety of designs. The tray can be quickly assembled and provides for all of the advantages of other more traditional platforms such as wood, but is much lighter, takes up much less room when not in use and is ISPM 15 exempt for international transport. Furthermore, it is more cost effective than other platforms and is 100% recyclable. **The possible applications are limited only by the imagination of the designer!**

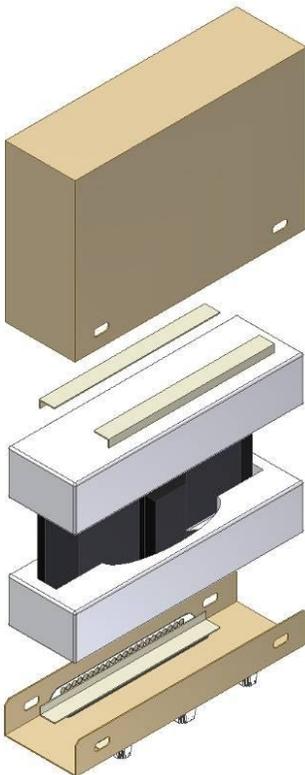

Head Office: 487 Gibson Road Newnan, GA 30263 · USA · T +1 770-253-8808 · www.optiledge.com

| Hong Kong | Atlanta | Shenzhen | Shanghai | Prague |

OPTILEEDGE is a trademark owned by OptiLedge LLC



Point of Purchase (POP) Displays

The POP market is very well suited to the OptiTray. Most POP displays are placed directly on retailers sales floors. However, using traditional wood platforms (wood pallets and half pallets) expose the retailers to various risks. Exposed nails can damage floors, injure workers, or even shoppers. To avoid these issues, the OptiTray can be incorporated directly into the design of POP displays. In this way, the OptiLedge foot is the only thing in contact with the sales floor avoiding many potential risks. In addition, the OptiTray is lighter and more sustainable than other solutions.



Head Office: 487 Gibson Road Newnan, GA 30263 · USA · T +1 770-253-8808 · www.optiledge.com

| Hong Kong | Atlanta | Shenzhen | Shanghai | Prague |

OPTILEDGE is a trademark owned by OptiLedge LLC



Handling Advantages of OptiLedge

The OptiLedge tray design is retail ready. Many POP displays must be manually placed on a stack base or other platform at the store. This results in possible damage to the display, is difficult for the co-workers to handle and adds labor. Instead, the OptiLedge can be put directly on the floor.

Shipping Platform



Display Ready Platform



Display Ready Shipping Platform –
no extra handling required




Head Office: 487 Gibson Road Newnan, GA 30263 · USA · T +1 770-253-8808 · www.optiledge.com

| Hong Kong | Atlanta | Shenzhen | Shanghai | Prague |


OPTILEDGE is a trademark owned by OptiLedge LLC




OptiTray- Technical Details:

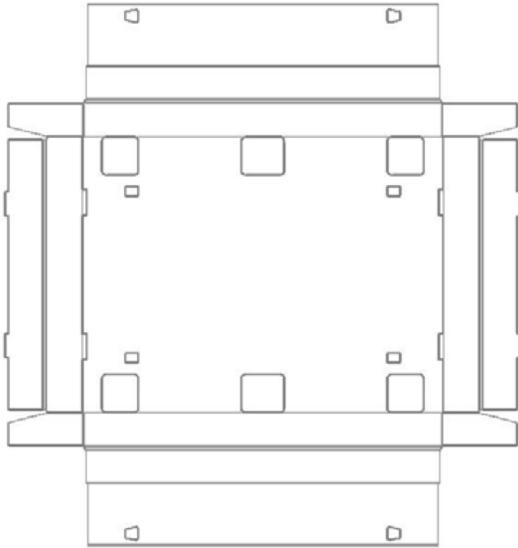

Single Pair Solution

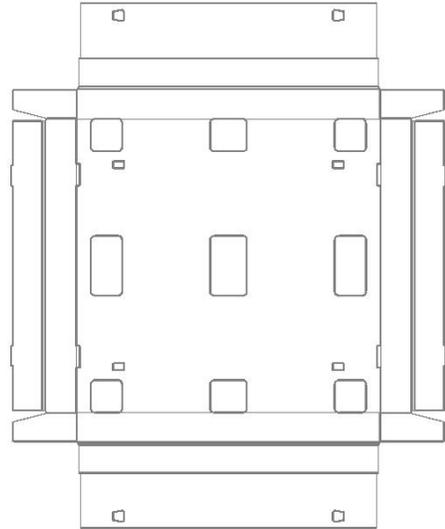

Tandem Pair Solution

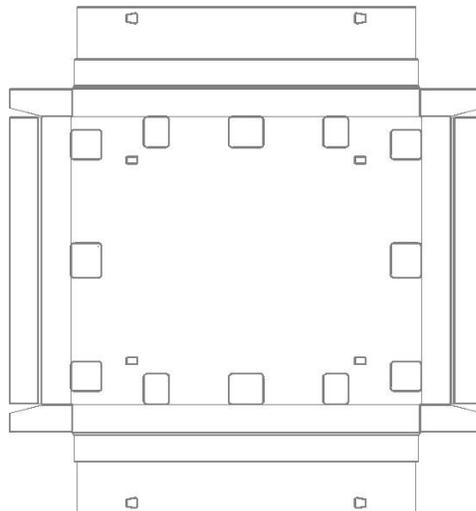

Perimeter Solution

Head Office: 487 Gibson Road Newnan, GA 30263 · USA · T +1 770-253-8808 · www.optiledge.com


| Hong Kong | Atlanta | Shenzhen | Shanghai | Prague |

OPTILEDGE is a trademark owned by OptiLedge LLC




Line-Type Legend for Standard Tray Design


- Black – Cut
- Green – Score
- Blue – Perf-Score

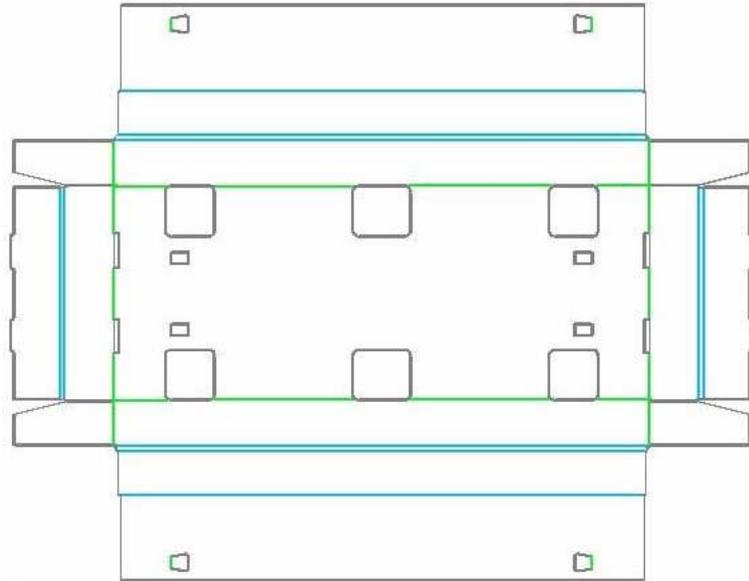

OptiLedge Feet

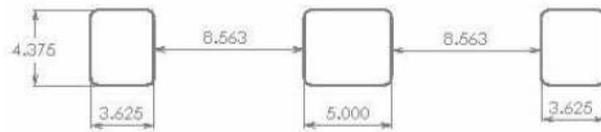

Cutouts for 760 Series Devices

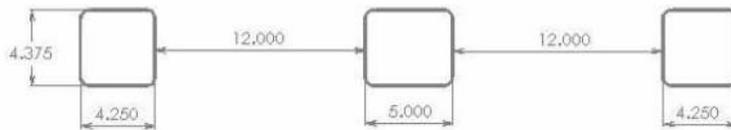


Cutouts for 991 Series Devices

Head Office: 487 Gibson Road Newnan, GA 30263 · USA · T +1 770-253-8808 · www.optiledge.com

| Hong Kong | Atlanta | Shenzhen | Shanghai | Prague |

OPTILEDGE is a trademark owned by OptiLedge LLC

Step 1

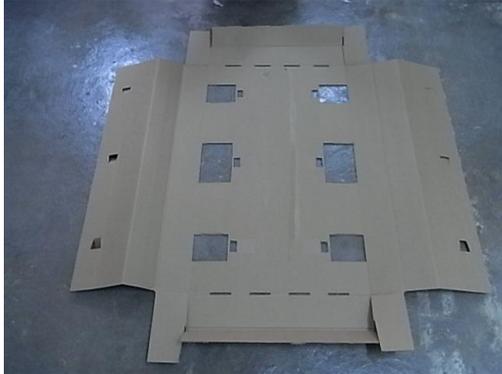


Fold all crease lines of OptiTray



Step 2

Fold up the two side panels and fold the flab on side as above

Step 3

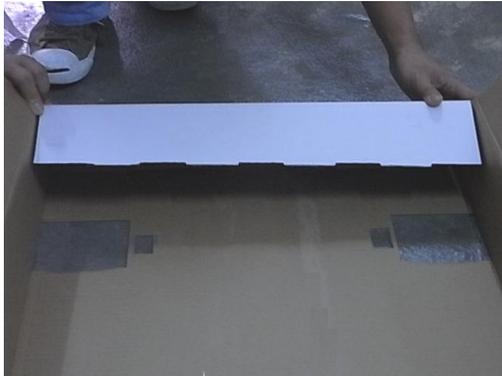

Cover the two side flaps by the front flap

Step 4



Lock the front flap into holes on bottom, repeat 2 to 4 for other side

Step 5



Then put the two OptiLedge into the hole on bottom as above.

Step 6



Cover the OptiLedge by the side panel flaps.

Step 7




Be sure the OptiLedge leg going through the tray.

Step 8




Lock the tab on the side panel flap into the bottom hole.

Step 9

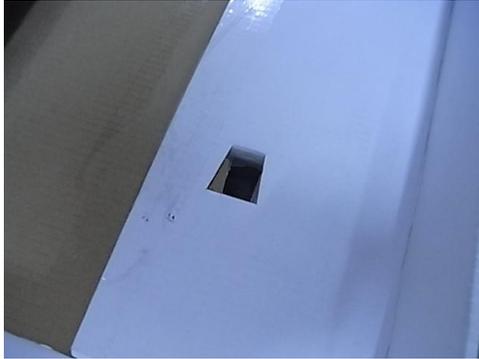


Lock the tab through the hole.

Step 10

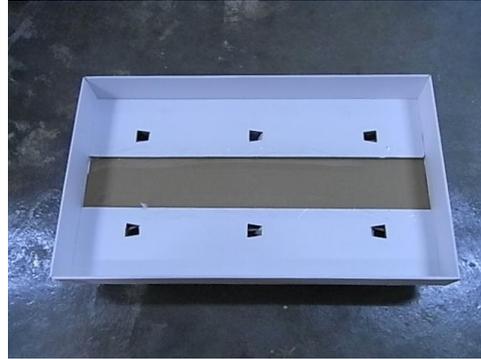

Repeat step 8 to 9 for the other five tabs.

Step 11

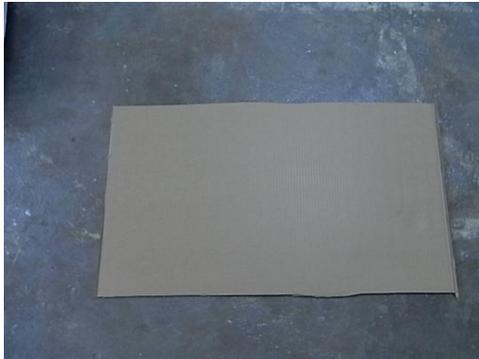

Bottom pad or substrate

Step 12



Place pad or substrate in tray.



For Further Information:

OptiLedge LLC- Headquarters:

487 Gibson Road
Newnan, Ga 30263

Phone: +1-770-253-8808

Fax: +1-770-253-8018

info@optiledge.com

www.optiledge.com

Asia Headquarters:

Flat H, 16/F Block A Universal Industrial Centre
23-25 Shan Mei Street, Fotan
Shatin, NT, Hong Kong

Phone: +852 3622 1996

Fax: +852 3622 1243

General Manager: Zackery Ng: zacng@optiledge.com

Head Office: 487 Gibson Road Newnan, GA 30263 · USA · T +1 770-253-8808 · www.optiledge.com

| Hong Kong | Atlanta | Shenzhen | Shanghai | Prague |

OPTILEDGE is a trademark owned by OptiLedge LLC